

CABLE • CONNECTOR (POWERTAP • XLR4P • miniXLR4P)

POWERTAP(D-TAP)

PTAP-M
POWERTAP(M)
with cable length 30cm



PTAP-Mnomi
POWERTAP(M)
only connector



PTAP-F
POWERTAP(F)
with cable length 20cm



PTAP(MF)-L
POWERTAP(L type)
Male → Female



PTAP(MF)-USB
POWERTAP(M)
→ USB & POWERTAP(F)



PTAP-1
POWERTAP(F)
→ XLR4P(M)
length : 26cm



PTAP-2
POWERTAP(M)
→ XLR4P(×2) 1:- 4:+
length : 30cm
for monitor etc.



PTAP-2-miniXLR
POWERTAP(M)
→ miniXLR4P(×2) 1/3:+ 2:-
length : 30cm
for TVlogic/Cineroid



PTAP-3
POWERTAP(M)
→ POWERTAP(F)
length : 26cm



PTAP-3-2
POWERTAP(M)
→ POWERTAP(F) × 2
length : 15cm



PTAP-3-4A
POWERTAP(M)
→ POWERTAP(F) × 4
length : 60cm



PTAP-4
POWERTAP(M)
→ DC PLUG
2.1Φ CENTER(-)minus
length : 26cm



PTAP-4-CENTER+
POWERTAP(M)
→ DC PLUG
2.1Φ CENTER(+)plus
length : 26cm



PTAP-4-2.5Φ-CENTER+
POWERTAP(M)
→ DC PLUG
2.5Φ CENTER(+)plus
length : 26cm



 
PTAP-4L
POWERTAP(M)
→ DC PLUG(L type)
2.1Φ CENTER(-)minus
length : 26cm



PTAP-4L-CENTER+
POWERTAP(M)
→ DC PLUG(L type)
2.1Φ CENTER(+)plus
length : 26cm




PTAP-4L-2.5Φ-CENTER+
POWERTAP(M)
→ DC PLUG(L type)
2.5Φ CENTER(+)plus
length : 26cm

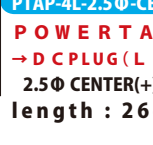

PTAP-5
POWERTAP(M)
→ HIROSE HR10A7P4P
length : 26cm



 PTAP-6
for ATMOS SHOGUN
POWERTAP(M)
→ POWERTAP(M)
length : 70cm

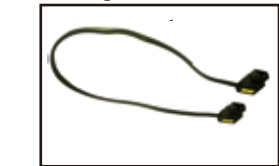

PTAP-EIAJ4
for SONY Camera(BPU)
POWERTAP(M)
→ EIAJ4 PLUG(L type)
length : 1m



PTAP-HR10A10J12S
for Canon 12P lens
POWERTAP(M)
→ HR10A-10J-12S
length : 80cm



PTAP-KMC9BPD6P
SONY WRT822 wireless
POWERTAP(M)
→ KMC9BPD6P
length : 30cm



XLR4P • miniXLR4P



XLR4P-ST
XLR4P(F)
→ XLR4P(M)
length : 1m



XLR4P-CURL
CURL type
XLR4P(F)
→ XLR4P(M)
length : 1m
(max1.5m)



XLR4P-ST-L-B
connector black
L type
XLR4P(F)
→ XLR4P(M)
length : 1m



XLR4P(M)-BP
XLR4P(M)
→ DC PLUG
2.1Φ CENTER(-)minus
length : 26cm



XLR4P(M)-2.1Φ-CENTER+
XLR4P(M)
→ DC PLUG
2.1Φ CENTER(+)plus
length : 26cm



 
XLR4P(M)-2.5Φ-CENTER+
XLR4P(M)
→ DC PLUG
2.5Φ CENTER(+)plus
length : 26cm

XLR4P(M)-BPL
XLR4P(F)
→ DC PLUG(L type)
2.1Φ CENTER(-)minus
length : 26cm

XLR4P(M)-2.1Φ-L-CENTER+
XLR4P(M)
→ DC PLUG(L type)
2.1Φ CENTER(+)plus
length : 26cm

XLR4P(M)-2.5Φ-L-CENTER+
XLR4P(M)
→ DC PLUG(L type)
2.5Φ CENTER(+)plus
length : 26cm

CABLE • CONNECTOR (DCPLUG • USB • LEMO • CIGAR)

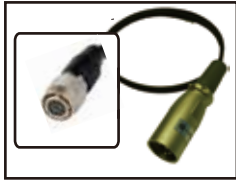

XLR4P(M)-HR10A10J12S
for Canon 12P lens
XLR4P(M)
→**HR10A-10J-12S**
length : 80cm



XLR4P(M)-HR10A7P4P
XLR4P(M)
→**HIROSE HR10A7P4P**
length : 30cm



XLR4P(M)-KMC9BPD6P
SONY WRT822 wireless
XLR4P(M)
→**KMC9BPD6P**
length : 30cm



miniXLR4P(M)-HR10A7P4P
mini XLR4P(M)
→**HIROSE HR10A7P4P**
length : 80cm



XLR4P-D F P U2
for Digital FPU
XLR4P(M) × 2 1:- 4:+
→**XLR4P(M) × 2 1,2:- 3,4:+**
length : 1m

1
PROFILE
SUITABLE
SHEET

DC PLUG • DC JACK



CABLE-2.1Φ-DC1
DCPLUG cable
(2.1Φ)
(please select ●)
26 : 26cm
100 : 100cm



CABLE-2.1Φ-L-DC1
DCPLUG cable
(2.1Φ)
L type
length : 26cm



DCJACK-CABLE1
DCJACK cable
(2.1Φ)
length : 30cm



2.1φ DC jack ↓
↔2.5φ DC plug
DCPLUG-2.1 to 2.5
2.1φ DCjack
→2.5φ DC plug
(not change +&-)
DCPLUG-2.5 to 2.1
2.5φ DCjack
→2.1φ DC plug
(not change +&-)

2
BATTERY
PLATE



CABLE-2.5Φ-DC1
DCPLUG cable
(2.5Φ)
(please select ●)
50 : 50cm
100 : 100cm



CABLE-2.5Φ-L-DC1
DCPLUG cable
(2.5Φ) **L type**
length : 50cm



CABLE-BP-ST
DC Jack→
DCPLUG
(2.1Φ)
CENTER(-)
length : 50cm

DCPLUG2.1Φ-KCHANGE-1
cover on 2.1Φ DCplug

• **CENTER(-)**→**CENTER(+)**
• **CENTER(+)**→**CENTER(-)**



3
FOR BRAND
PRODUCTS

USB

PTAP(MF)-USB

POWERTAP(M)
→**USB & POWERTAP(F)**



POWERTAP(F)
↓
↑ **USB 5V1.6A**
↑ **POWERTAP(M)**

PTAP-USB(A F)-1

POWERTAP(input11~17V)
→**USB(F)**(output5V2.1A)
length : 1m



XLR4P(M)-USB(A F)-1

XLR4P(M)(input11~17V)
→**USB(F)**(output5V2.1A)
length : 1m



DCJACK-USB(A F)-1

2.1φ DCPLUG(CENTER-)
(input11~17V)
→**USB(F)**(output5V2.1A)
length : 1m



CABLE-USB(A F)-1

no connector
(input11~17V)
→**USB(F)**(output5V2.1A)
length : 1m



4
CABLE
CONNECTOR

5
RAINCOVER
and more

6
SOFT BAG



LEMO

PTAP(M)-LEMO4P-C300MK2
for Canon C300 Mark II



POWERTAP
→**LEMO4P**
length : 50cm

PTAP(M)-LEMO2P-BOLT
for TERADEK BOLT



POWERTAP
→**LEMO2P**
(1:GND, 2:+)
length : 50cm

PDV(●)-LEMO2P-BOLT
for TERADEK BOLT
DV plate→LEMO2P



(please select ●)
S: for SONY(L/M) P: for Panasonic VBD
SV: for SONY(V) C: for Canon BP970/BP828
length : 50cm
output voltage : **THROUGH**

PTAP(M)-LEMO3P-STEADYCAM
for STEADYCAM LEMO3P



POWERTAP
→**LEMO3P**
(1:GND, 2:+)
length : 50cm

XLR4P(M)-LEMO4P-C300MK2
for Canon C300 Mark II
XLR4P(M)→**LEMO4P**
length : 50cm

XLR4P(M)-LEMO2P-BOLT
for TERADEK BOLT
XLR4P(M)→**LEMO2P**
length : 50cm

XLR4P(M)-LEMO3P-STEADYCAM
for STEADYCAM LEMO3P
XLR4P(M)→**LEMO3P**
length : 50cm

LEMOFFA4P-LEMO2P-BOLT
from STEADYCAM LEMO4P
to BOLT LEMO2P



LEMO4P→**LEMO2P** length : 50cm

CAR CIGAR



 
CABLE-CIGAR(M)-XLR4P(F)
CIGAR(M)
→**XLR4P(F)**
length : 30cm



CABLE-CIGAR(F)-XLR4P(M)
CIGAR(F)
→**XLR4P(M)**
length : 30cm

7
SHOE
CLIP-POLE
and more

8
OTHER

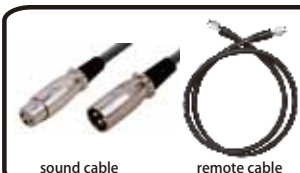

sound cable

remote cable

We can another CABLE!
Please feel free to contact us!



BNC cable